


Cilindros D.E. brida de muñones [Serie 8200]

D.A. cylinders with trunnion [Series 8200] / Vérins D.E. avec tourillon [Série 8200]

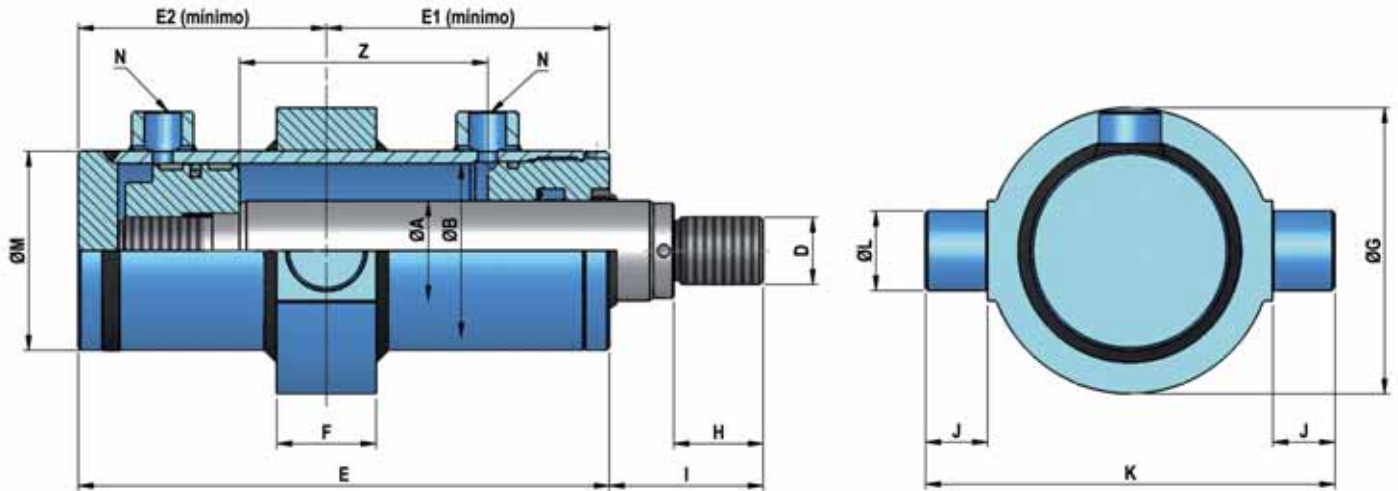

REF.	Ø A	Ø B	E	E1	E2	D	F	G	H	I	J	K	L	M	N BSP
8200/Z	20	32	107 + Z	65	58	M14x1,5	20	56	18	35	12	80	16	42	1/4
8201/Z	22														
8202/Z	25	40	97 + Z	74	64	M16x1,5	24	70	22	40	16	102	20	50	3/8
8203/Z	28														
8204/Z	25														
8205/Z	28	50	104 + Z	80	69	M20x1,5	30	85	28	48	20	125	25	60	3/8
8206/Z	30														
8207/Z	36														
8208/Z	30														
8209/Z	35	60	106 + Z	84	70	M27x2	35	100	36	58	25	150	30	70	3/8
8210/Z	40														
8211/Z	36														
8212/Z	40	63	106 + Z	84	70	M27x2	40	105	36	58	25	155	32	75	3/8
8213/Z	45														
8214/Z	35														
8215/Z	40	70	114 + Z	90	75	M27x2	40	115	36	58	25	165	32	80	3/8
8216/Z	45														
8217/Z	36														
8218/Z	40														
8219/Z	45	80	126 + Z	95	75	M33x2	40	125	45	68	25	175	32	95	3/8
8220/Z	50														
8221/Z	56														
8222/Z	45														
8223/Z	50														
8224/Z	56	100	138 + Z	106	82	M42x2	45	156	56	85	32	220	40	115	1/2
8225/Z	60														
8226/Z	70														
8227/Z	70	125	210 + Z	140	115	M48x2	55	190	63	92	40	270	50	145	3/4
8228/Z	90														
8229/Z	80	140	223 + Z	155	120	M64x3	65	220	85	120	50	320	55	160	3/4
8230/Z	90	160	238 + Z	175	130	M80x3	70	250	95	130	50	350	63	180	1
8231/Z	110														
8232/Z	110	200	278 + Z	190	145	M80x3	90	300	95	130	63	426	80	230	1

Z = carrera (a definir por el cliente). Consultar amarres de vástago en la página 39.

Z = stroke (to be defined by customer). Check rod attachments on page 39.

Z = course (à définir par le client). Vérifiez les fixations de tige sur page 39.

